CURRENT
Luxury

SilenTrac

PROGRAMMING GUIDE

SETUP WITH THE BRIDGE AND APP.....Page 2
SETUP WITH THE BRIDGE (NO APP).....Page 3
CHANGE POSITIONS ON THE DRAPERY TRACK (SINGLE).....Page 4
CHANGE POSITIONS ON THE DRAPERY TRACK (DUAL).....Page 6
CHANGE THE OPEN POSITION FOR THE WINDOW SIDE DRAPERY (MOTOR 2).....Page 8
CHANGE THE CLOSE POSITION FOR THE WINDOW SIDE DRAPERY (MOTOR 2).....Page 9
PAIR THE REMOTE TO THE DRAPERY (ZIGBEE).....Page 10
WIFI REMOTE PROGRAMMING FOR SILENTRAC.....Page 11
INTEGRATE WITH AMAZON ECHO OR ECHO PLUS ZIGBEE USING THE CURRENT PRODUCTS CORP BRIDGE.....Page 12
INTEGRATE WITH GOOGLE HOME ZIGBEE AND WIFI USING THE CURRENT LUXURY APP... Page 14
SILENTRAC REMOTE PROGRAMMING ISNTRUCTIONS WITHOUT A BRIDGE..... Page 16
PAIR THE REMOTE TO THE DRAPERY (FM)..... Page 19
ENABLE OR DISABLE SMART ASSIST..... Page 20
REMOVE THE ZIGBEE DRAPERY FROM A NETWORK..... Page 21
REMOVE A WIFI DRAPERY FROM A NETWORK / MASTER RESET..... Page 22
MASTER RESET THE DRAPERY (ZIGBEE)..... Page 23

www.currentluxury.com
1-844-307-7435
service@currentluxury.com

SETUP WITH THE BRIDGE AND APP

1. Download the App

Download the Current Luxury App from the google play store (for Android) or the App Store (for Apple) Click "Register Account" to create user account. Open, app and select add bridge.

2. Name your Bridge

Proceed to name your Bridge (make sure that your location services on your phone are enable and permissions have been granted to the Current Luxury app.)

3. Connect Power to Bridge

Find an outlet in a location central to the drapery you are installing in the home. Insert the micro-usb end of the included power cable into the power port on the bridge. Plug the other end of the cable into an outlet.

4. Enable Bluetooth

Make sure that Bluetooth is enabled on your phone and permissions have been granted to the Current Luxury app.

5. Put Bridge into Pairing Mode

Press and release the button on the back of the bridge for one second using a paper clip. A solid blue light will turn on while the bridge is in discover mode.

6. Connect the Bridge

In the app under devices, hit the + sign. The bridge will show up in the unlearned devices . Tap the bridge you'd like to learn.

7. Connect to Wi-Fi

Choose from the list of available Wi-Fi networks to connect the bridge and enter the Wi-Fi password.

8. Learn the Devices

In the app under devices, hit the + sign.

For Zigbee Pull down and release the Pendant twice on the drapery you want to pair to the bridge. You will see the device pop up in the menu on your Smart Phone screen.

For Wi-fi devices Press and release the small uplifted button on the bottom of the motor.

Select the appropriate device, using the "jog" button if needed.

Once the device has been selected, name the device.

Repeat step 8 for all new devices.

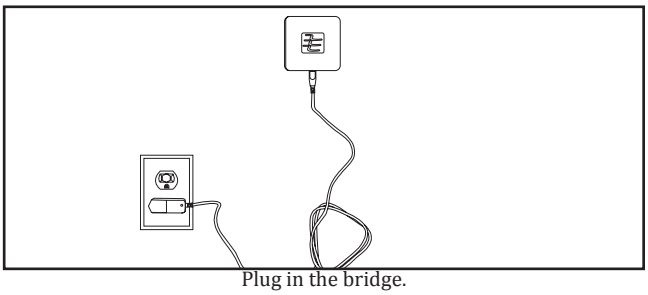

Plug in the bridge.

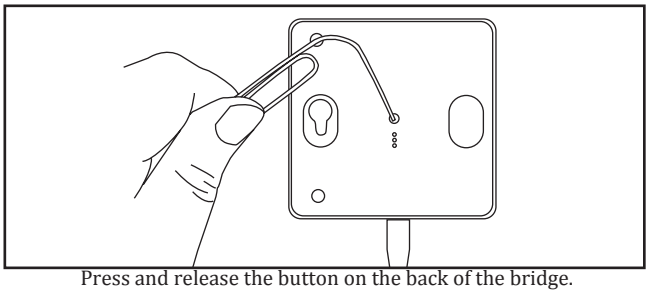

Press and release the button on the back of the bridge.

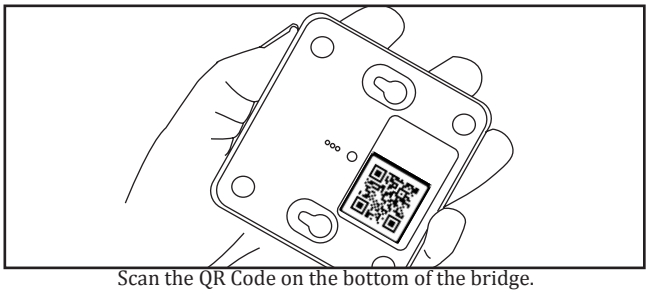

Scan the QR Code on the bottom of the bridge.

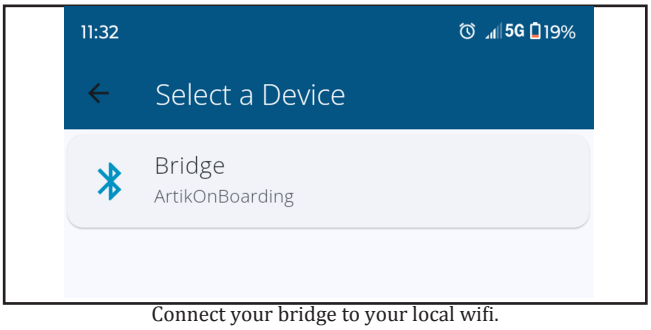

Connect your bridge to your local wifi.

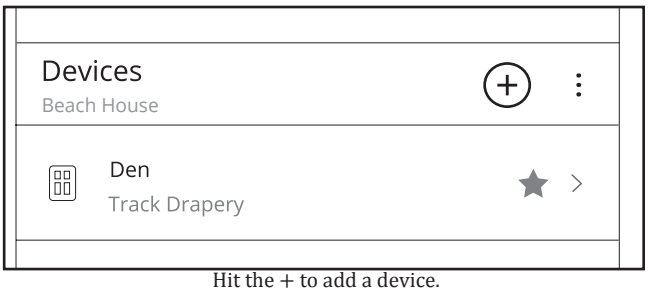

Hit the + to add a device.

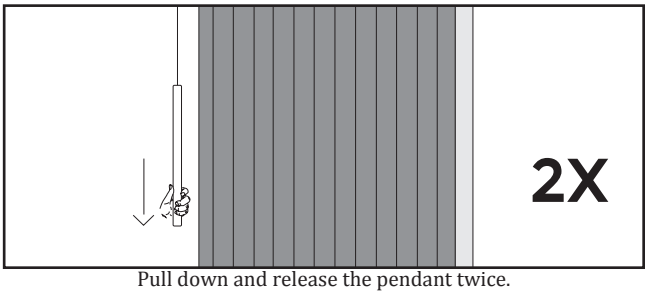

Pull down and release the pendant twice.

SETUP WITH THE BRIDGE (NO APP)

1. Connect Power to Bridge

Find an outlet in a location central to the drapery you are installing in the home. Insert the micro-usb end of the included power cable into the power port on the bridge. Plug the other end of the cable into an outlet.

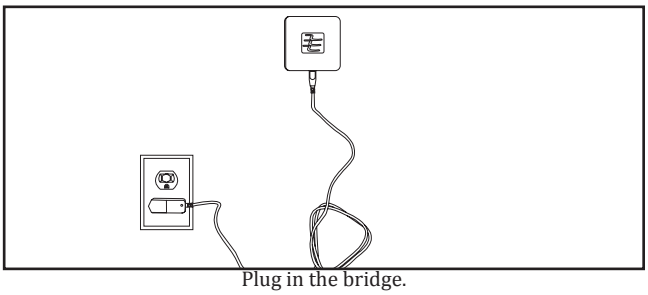

Plug in the bridge.

2. Put Bridge into Pairing Mode

Push a tack or pen into the hole in the back of the bridge to depress and hold the recessed button until the blue LED begins to flash .

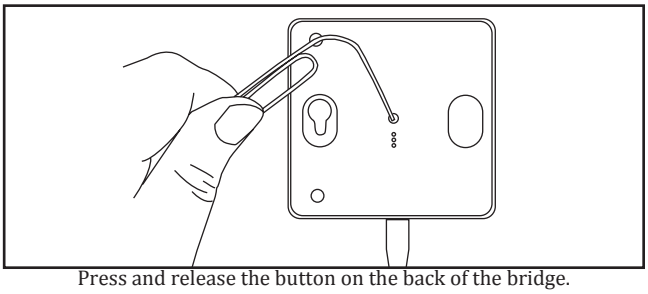

Press and release the button on the back of the bridge.

3. Pair Drapery

On any drapery you would like to pair to the bridge pull down and release the Pendant once to start the drapery, then once again to stop it. The drapery will jog along with the green LED on the bridge will flash three times to indicate the drapery has been paired.

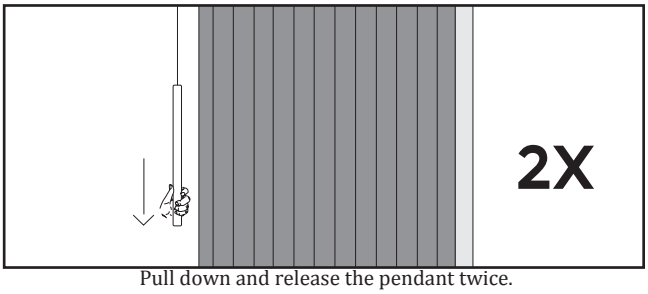

Pull down and release the pendant twice.

CHANGE POSITIONS ON THE DRAPERY TRACK (SINGLE)

For additional help during installation of your drapery track, visit www.currentproductscorp.com/support/drapery-track or call 1-844-307-7435.

CHANGE THE OPEN POSITION

1. ENTER LEARN OPEN POSITION MODE

Pull down and release the Pendant so the drapery moves towards the direction you would like to set as the “open” position.

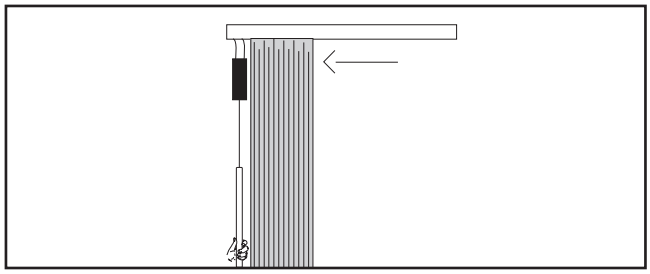

Pull down and release the Pendant

After the drapery reaches it’s current open position, it will stop moving. Pull down and hold the Pendant for five seconds, or until the drapery jogs.Then Release the Pendant.

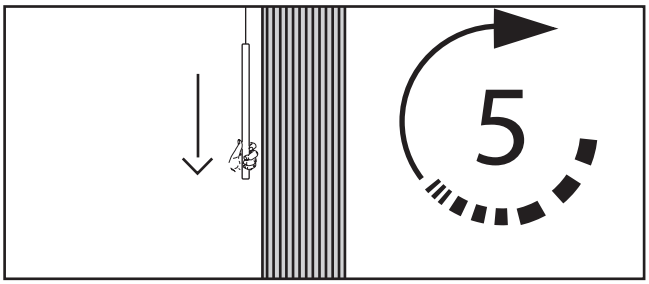

Pull down and hold the Pendant for 5 seconds, then release

2. SET THE OPEN POSITION

By hand, pull the drapery until it reaches the desired open position.

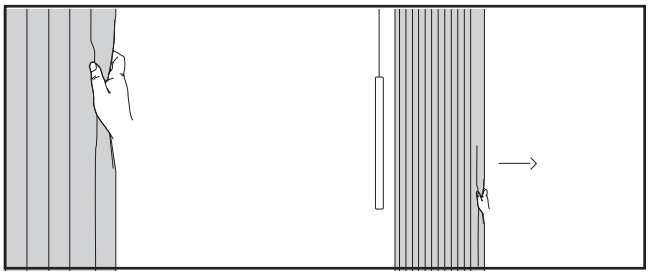

Pull the drapery by hand to the desired full open position

3. EXIT LEARN OPEN POSITION MODE

Pull down and release the Pendant once to exit learn mode. The drapery will jog to confirm it has learned this position.

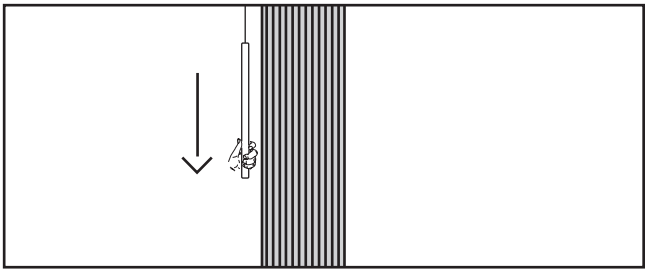

Pull down and release the Pendant

CHANGE THE CLOSE POSITION

1. ENTER LEARN CLOSE POSITION MODE

Pull down and release the Pendant so the drapery moves towards the direction you would like to set as the “close” position.

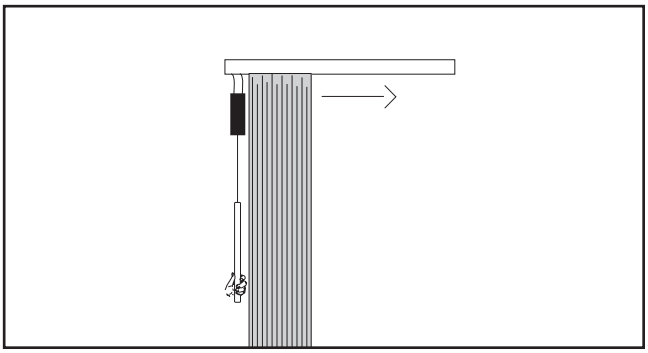

Pull down and release the Pendant to close drapery

After the drapery reaches the position, it will stop moving. Pull down and hold the Pendant for five seconds, or until the drapery jogs.

Release the Pendant.

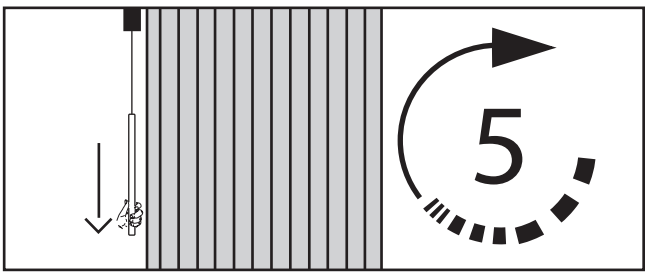

Pull down and hold the Pendant for 5 seconds, then release

2. SET THE CLOSE POSITION

By hand, pull the drapery until it reaches the desired close position.

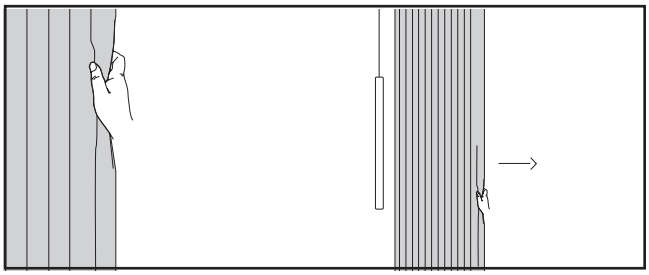

Pull the drapery by hand to the desired full close position

3. EXIT LEARN CLOSE POSITION MODE

Pull down and release the Pendant once to exit learn mode. The drapery will jog to confirm it has learned this position.

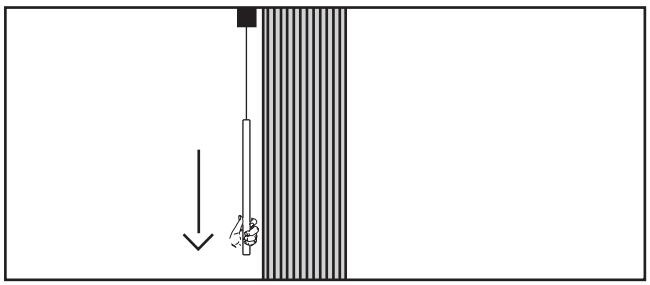

Pull down and release the Pendant

CHANGE THE OPEN POSITION FOR THE ROOM SIDE DRAPERY (MOTOR I)

1. ENTER LEARN OPEN POSITION MODE

Pull down and release the Pendant so the room side drapery moves towards the direction you would like to set as the "open" position.

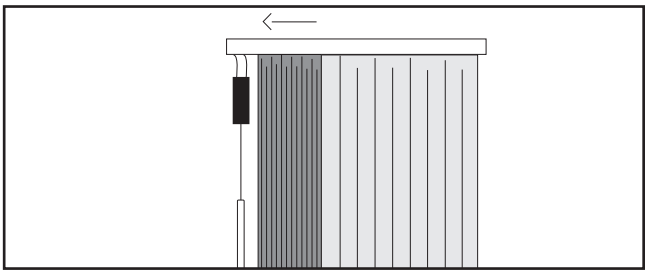

Pull down Pendant to move room side drapery to open position

After the drapery reaches the position, it will stop moving. Pull down and hold the Pendant for five seconds, or until the drapery jogs. Then release the Pendant.

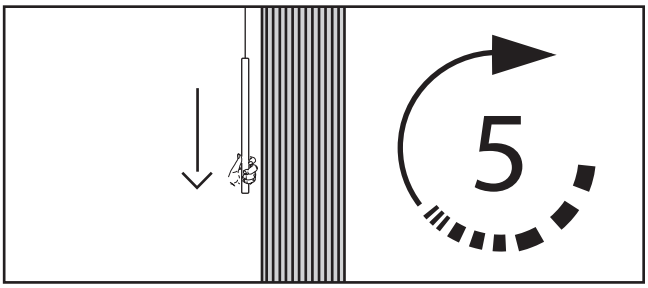

Pull down and hold the Pendant for 5 seconds, then release

2. SET THE OPEN POSITION

By hand, pull the curtain until it reaches the desired open position.

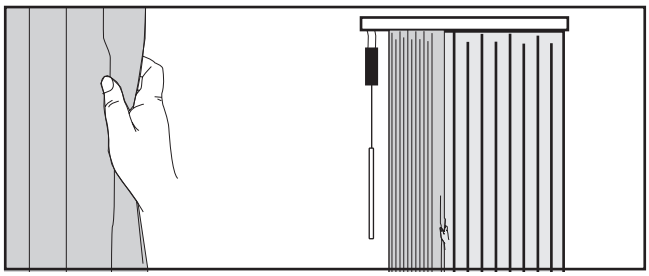

Pull the drapery by hand to the desired full open position

3. EXIT LEARN POSITION MODE

Pull down and release the Pendant once to exit learn mode. The drapery will jog to confirm it has learned this position.

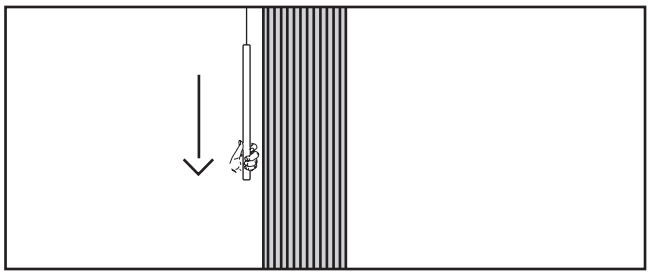

Pull down and release the Pendant

CHANGE THE CLOSE POSITION FOR THE ROOM SIDE DRAPERY (MOTOR I)

1. ENTER LEARN CLOSE POSITION MODE

Pull down and release the Pendant so the drapery moves towards the direction you would like to set as the “close” position.

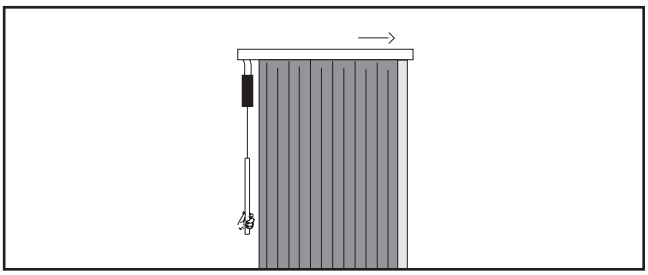

Pull down Pendant to move room side drapery to closed position

After the drapery reaches the position, it will stop moving. Pull down and hold the Pendant for five seconds, or until the drapery jogs.Then release the Pendant.

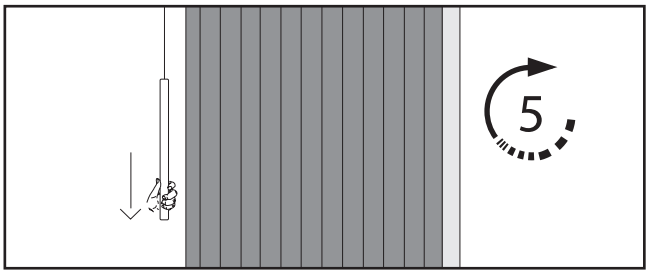

Pull down and hold the Pendant for 5 seconds, then release

2. SET THE CLOSE POSITION

By hand, pull the curtain until it reaches the desired close position.

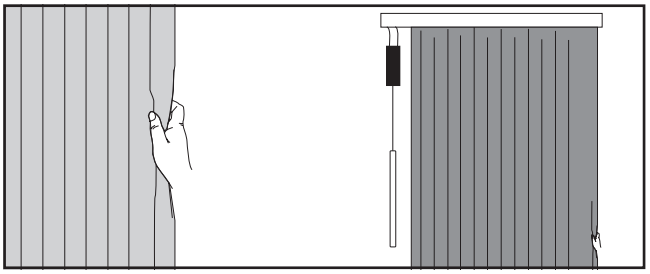

Pull the drapery by hand to the desired full closed position

3. EXIT LEARN CLOSE POSITION MODE

Pull down and release the Pendant once to exit learn mode. The drapery will jog to confirm it has learned this position.

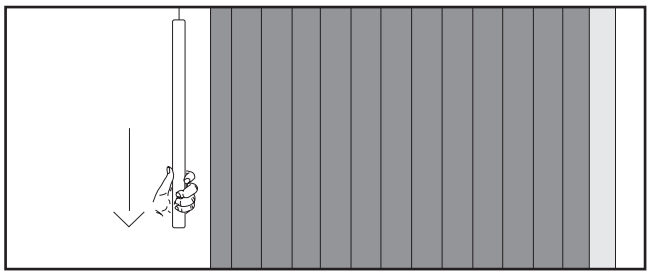

Pull down and release the Pendant

CHANGE THE OPEN POSITION FOR THE WINDOW SIDE DRAPERY (MOTOR 2)

1. ENTER LEARN OPEN POSITION MODE

Lift up and release the Pendant so the drapery moves towards the direction you would like to set as the “open” position.

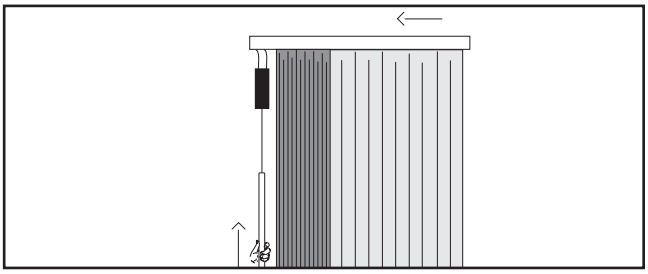

Lift up and release Pendant to move drapery to open position

After the drapery reaches the position, it will stop moving. Lift up and hold the Pendant for five seconds, or until the drapery jogs. Then release the Pendant.

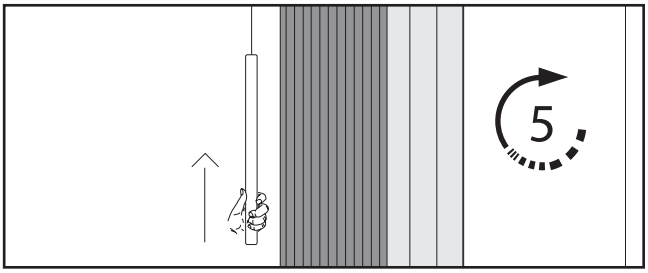

Lift up and hold Pendant for 5 seconds, then release

2. SET THE OPEN POSITION

By hand, pull the drapery until it reaches the desired full open position.

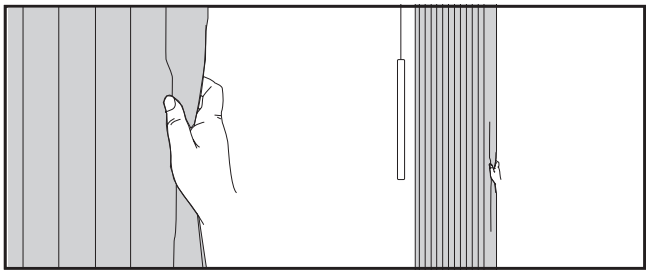

Pull the drapery to full open position

3. EXIT LEARN OPEN POSITION MODE

Lift up and release the Pendant once to exit learn mode. The drapery will jog to confirm it has learned this position.

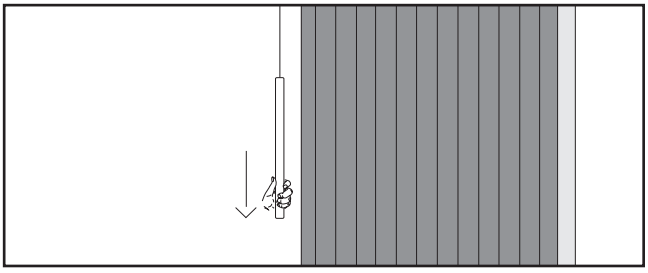

Pull down and release Pendant

CHANGE THE CLOSE POSITION FOR THE WINDOW SIDE DRAPERY (MOTOR 2)

1. ENTER LEARN CLOSE POSITION MODE

Lift up and release the Pendant so the drapery moves towards the direction you would like to set as the “close” position.

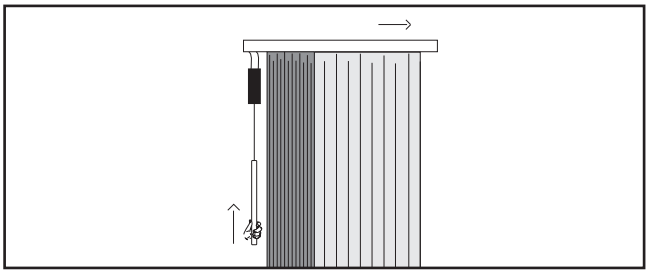

Lift up and release Pendant to move drapery to closed position

After the drapery reaches the position, it will stop moving. Lift up and hold the Pendant for five seconds, or until the drapery jogs.

Release the Pendant.

Lift up and hold Pendant for 5 seconds, then release

2. SET THE CLOSE POSITION

By hand, pull the drapery until it reaches the desired full close position.

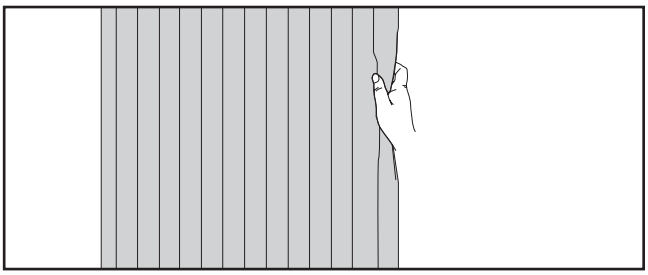

Pull drapery to full closed position

3. EXIT LEARN CLOSE POSITION MODE

Lift up and release the Pendant once to exit learn mode. The drapery will jog to confirm it has learned this position.

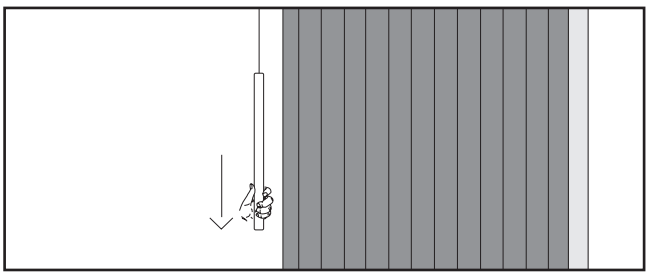

Pull down and release Pendant

PAIR THE REMOTE TO THE DRAPERY (ZIGBEE)

1. Connect Remote to Bridge

If using the Current Luxury bridge, use a tack or other object to depress and hold the recessed button on the bottom of the bridge. The LED should flash blue to show it is in pairing mode.

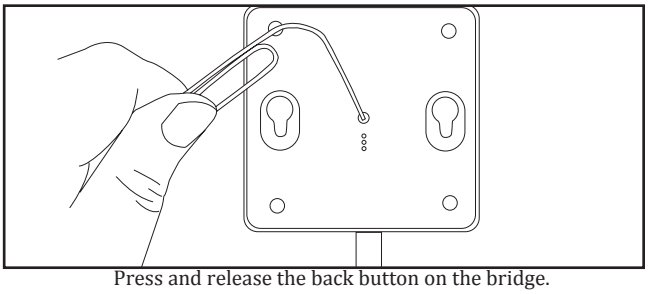

Press and release the back button on the bridge.

Pull the “Pull” tab from the bottom of the remote. Next, push any button on the face of the remote. The LEDs should scroll to show it is seeking a bridge. Then should flash to confirm it has paired to the bridge.

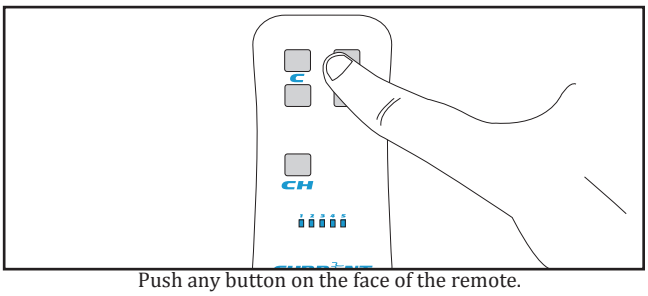

Push any button on the face of the remote.

2. Initiate Learn Mode on Drapery

Pull down and release the Pendant twice to enter learn mode.

After the first tug, the drapery should start moving. The second tug should stop it.

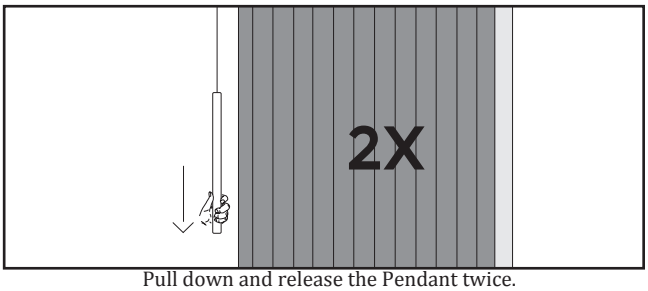

Pull down and release the Pendant twice.

3. Connect the Remote to the Drapery

On multi-channel remotes, select the channel you wish to pair to by pressing the Channel button until the LED corresponding with the appropriate channel is lit.

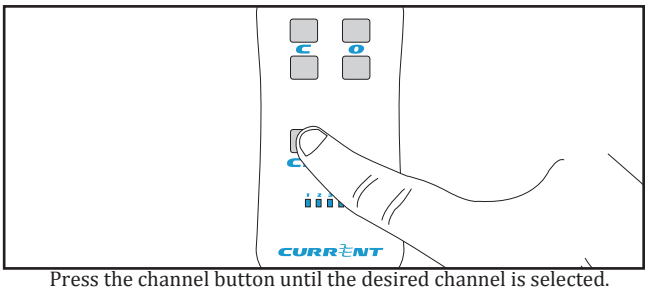

Press the channel button until the desired channel is selected.

Depress the “programming” button on the back of the remote by pushing a pen or other object through the hole in the back of the remote. The LEDs on the front will scroll.

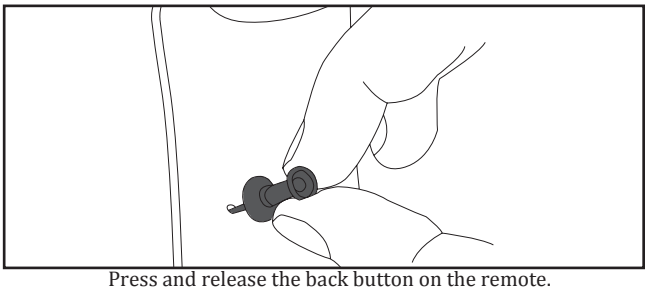

Press and release the back button on the remote.

Press and release the top left button on the remote. The drapery will jog to confirm pairing has been successful.

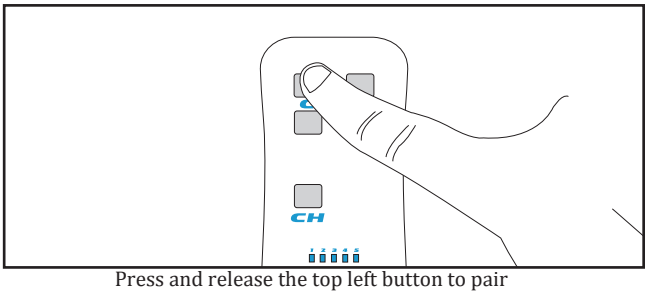

Press and release the top left button to pair

1. PUT MOTOR INTO PROGRAMMING MODE

Press and release the small uplifted button on the bottom of the motor.

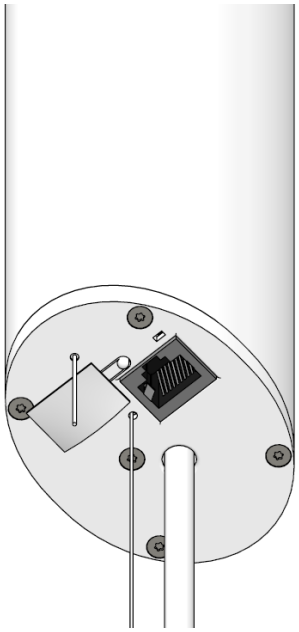

2. CONNECT THE REMOTE

On multi-channel remotes, select the channel you wish to pair to by pressing the Channel button until the LED corresponding with the appropriate channel is lit.

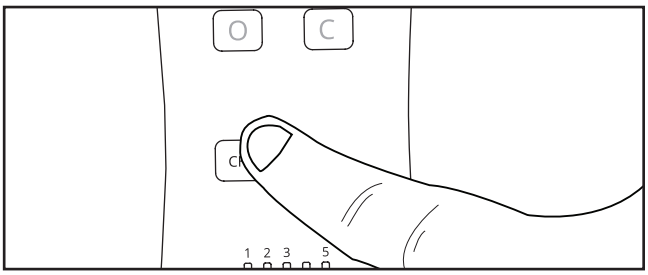

Select channel by pressing channel button

Depress the “pairing” button on the back of the remote by pushing a pen or other object through the hole in the back of the remote. The LEDs on the front will scroll.

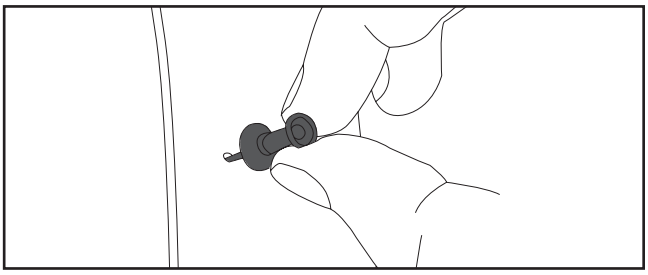

Depress pairing button on back of remote

Press and release the top left button on the remote. The drapery will jog to confirm pairing has been successful.

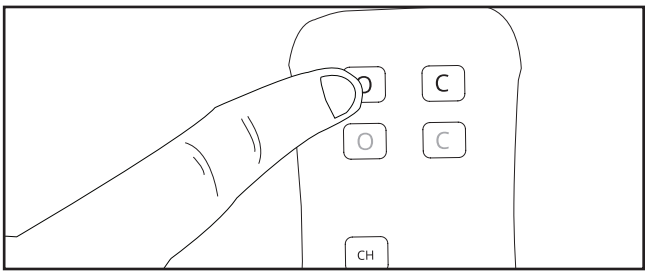

Press and release top left button on remote

INTEGRATE WITH AMAZON ECHO OR ECHO PLUS ZIGBEE AND WIFI USING THE CURRENT LUXURY APP

1. SET UP YOUR ECHO OR ECHO PLUS AND CPC BRIDGE

If your Alexa device is not yet set up, do so now by following the instructions that came with your device.

Also be sure the bridge and app have been setup. For instructions on how to set up your bridge and app, see the Bridge Set Up Guide.

2. DOWNLOAD THE SKILL

In the Alexa app menu, select "More" or the Menu Button , then select “Skills and Games.” Once you are on that page, hit the spyglass icon at the top right hand corner.

Search for the skill title “Current Luxury ” . If you want to be able to trigger Alexa using phrases, be sure to download the skill.

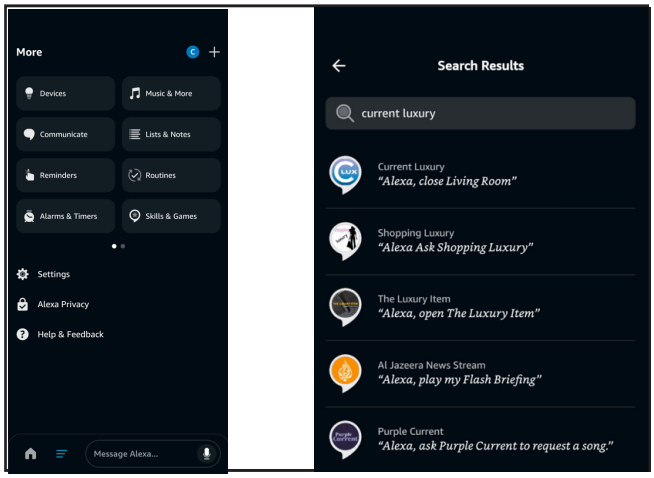

Download the Alexa Skill

3. SIGN IN

Use the login credentials you created when you first set up your bridge and app. You are now able to control your devices via Amazon Alexa

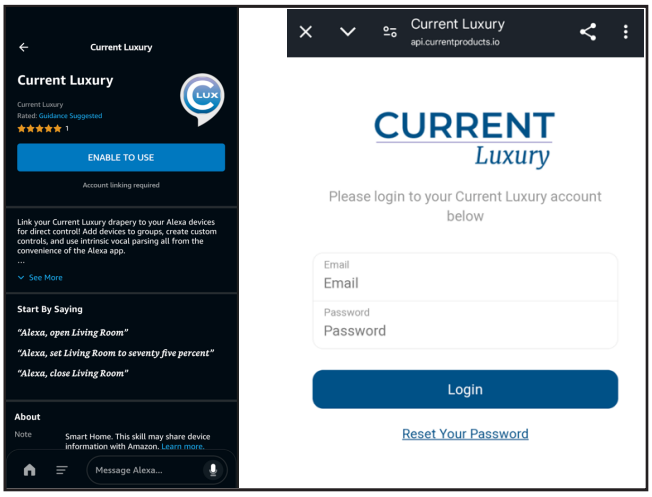

Sign into the Current Luxury app

4. USING ALEXA

Trigger Alexa using the trigger word selected when you installed the skill.

Say “Alexa, Open or Close ...”. Use percentages to get your drapery to specific position, or say “open” and “close.”

You can control devices, groups, or trigger scenes through Alexa, and create custom names for each in the Current Luxury app.

1. SET UP YOUR ECHO PLUS

If your Alexa device is not yet set up, do so now by following the instructions that came with your device.

---

2. ADD A DEVICE

From the menu in the Alexa app, go to “Devices” and hit the “+” in the top right hand corner of the screen. Hit “Add Device” on the menu that pops up on the screen. Select “Light” from the menu on the next screen. Scroll down to the bottom of the next screen to select “Other” as the brand, then hit “Discover Devices.”

While Alexa is searching, pull down and release the Pendant twice on each drapery you want to pair to Alexa.

Each drapery you are pairing will show up as a lightbulb.

---

3. CUSTOMIZE IN APP

In the Alexa app, you can change the name of each device to better your control of the devices. You can also add custom commands. We suggest custom naming each device, and creating commands for “open” and “close”.

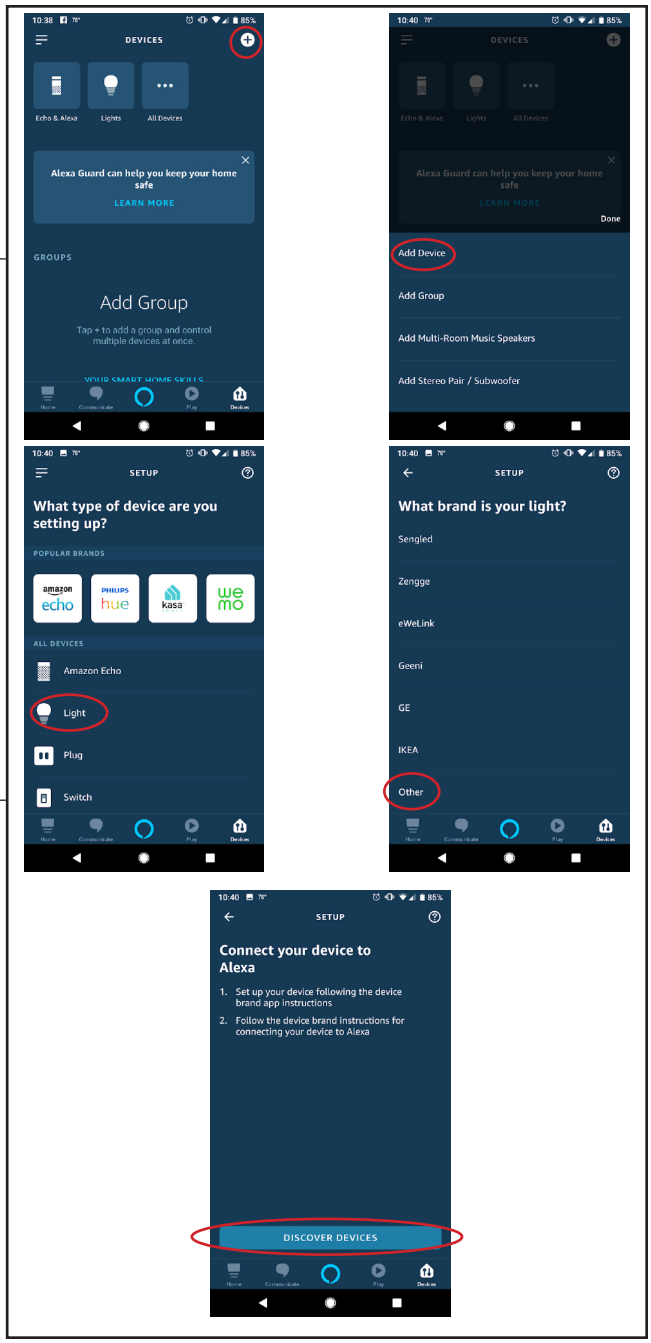

Alexa App Steps

INTEGRATE WITH GOOGLE HOME
ZIGBEE AND WIFI USING THE CURRENT LUXURY APP

1. SET UP YOUR GOOGLE HOME AND CPC BRIDGE

If your Google Home device is not yet set up, do so now by following the instructions that came with your device.

Also be sure the bridge and app have been setup. For Zigbee instructions on how to set up your bridge and app, see the Bridge Set Up Guide. For Wifi make sure devices are learned to the Current Luxury App

2. SET UP DEVICE

Open the Google Home app on your smart device and navigate to the correct “home” (some users may have multiple homes connected to one account).

Press the “Add” button, then “Set Up Device”, then “Works with Google”. Use the search function to locate “Current Luxury ”.

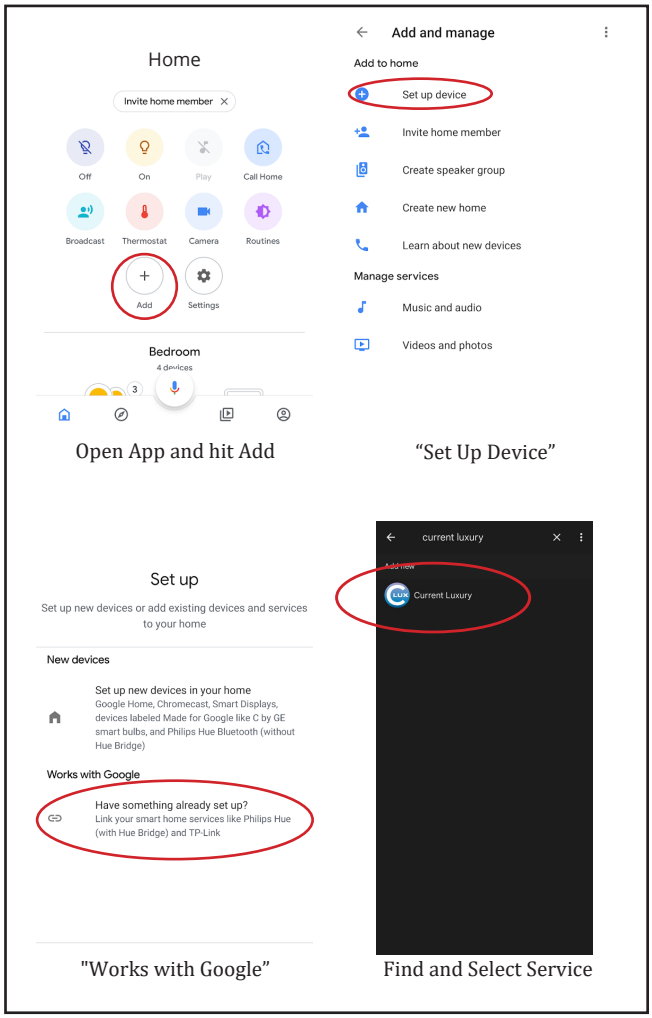

Open App and hit Add

“Set Up Device”

"Works with Google”

Find and Select Service

3. SIGN IN AND CUSTOMIZE

Use the login credentials you created when you first set up your bridge and app to log into the Current Luxury app.

Add devices already linked to your account to “rooms” of the home, creating rooms as desired.

See Figures 5-8.

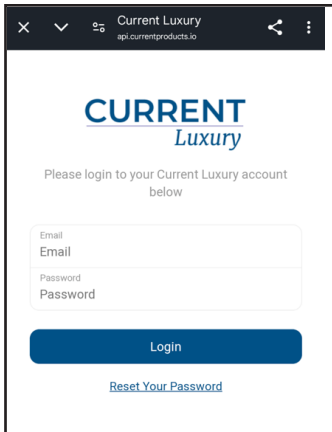

Figure 5 - Sign In

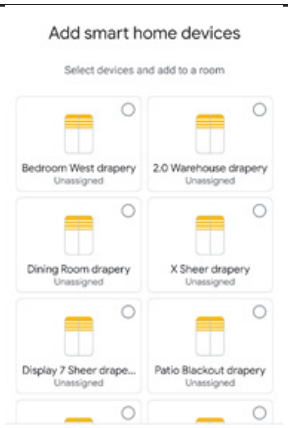

Figure 6 - Select Devices

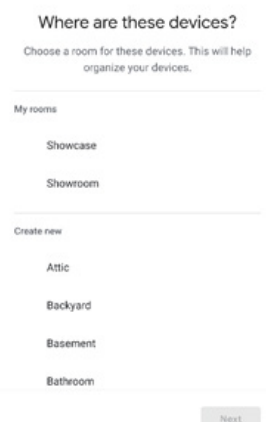

Figure 7 - Select Rooms

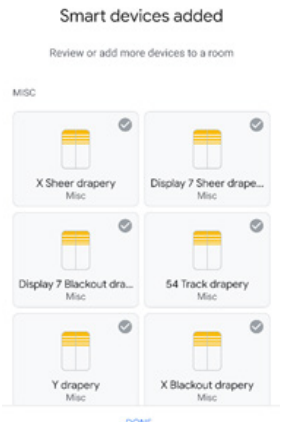

Figure 8- Review and confirm

---

4. USING GOOGLE HOME

Trigger Google Home using the phrase “Hey Google”.

You can say open or close, and use percentages to get your curtain to a specific position.

Example: “Hey Google, close the ‘living room’ ” or “Hey, Google, open the ‘kitchen’ to 50%”.

Google Home will know the names of the devices and groups based on what they are named in the app.

You can control devices, groups, or trigger scenes through Google, and create custom names for each in the Current Luxury app.

SILENTRAC REMOTE PROGRAMMING INSTRUCTIONS WITHOUT A BRIDGE

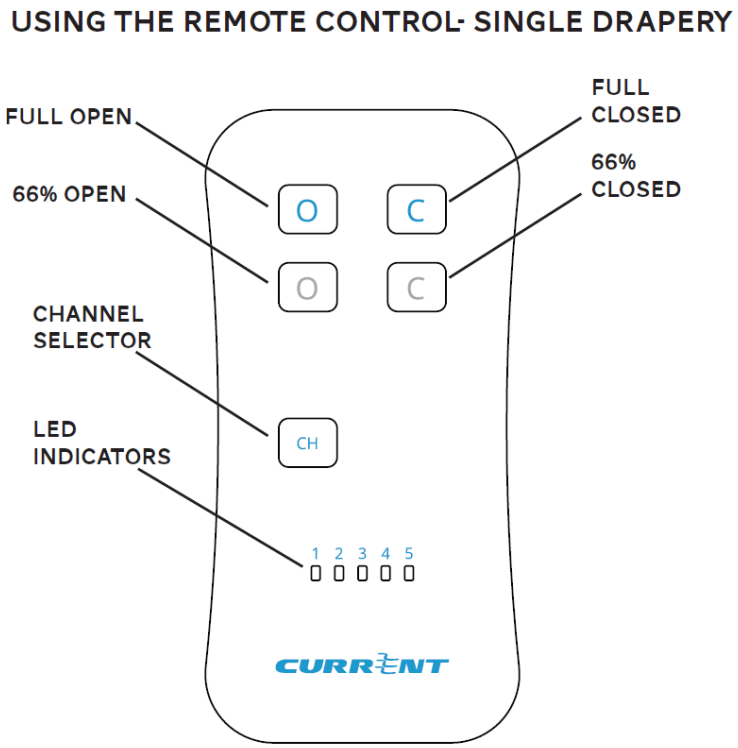

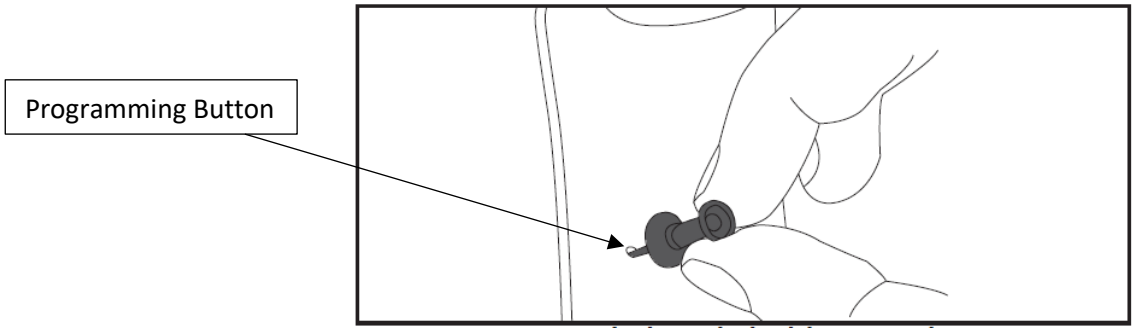

1. LEARN A REMOTE TO A NETWORK.

Pull the "Pull" tab from the bottom of the remote. Next, push any button on the face of the remote. The LEDs should scroll to show it is seeking a bridge. Then should flash to confirm it has paired to a network.

2. LEARN A DEVICE TO THE REMOTE.

On multi-channel remotes, select the channel you wish to pair to by pressing the Channel button until the LED corresponding with the appropriate channel is lit.

Tug twice on pendant of the drapery to put in learn mode.

Depress the “programming” button on the back of the remote by pushing a pen or other object through the hole in the back of the remote. The LEDs on the front will scroll.

Press and release the top left button on the remote. The drapery will jog to confirm pairing has been successful.

3. DELETE A DEVICE FROM REMOTE.

On multi-channel remotes, select the channel you wish to pair to by pressing the Channel button until the LED corresponding with the appropriate channel is lit.

Tug twice on pendant of the drapery to put in learn mode.

Depress the “programming” button on the back of the remote by pushing a pen or other object through the hole in the back of the remote. The LEDs on the front will scroll.

Press and release the top right button on the remote. The drapery will jog to confirm its deleted.

4. REMOVE A REMOTE FROM THE NETWORK.

Depress the “programming” button on the back of the remote six times by pushing a pen or other object through the hole in the back of the remote. If the remove command is successful, the LEDs on the front will scroll when any button on the remote is pressed.

5. REVERSE THE DIRECTION OF THE DRAPERY.

On multi-channel remotes, select the channel of the drapery that you wish to reverse the direction on by pressing the Channel button until the LED corresponding with the appropriate channel is lit.

Depress the “programming” button on the back of the remote twice by pushing a pen or other object through the hole in the back of the remote. The LEDs on the front will all flash.

Press and release the top left button on the remote. All draperies on that associated channel will jog.

Tug and release the pendant or pendants of the draperies that you wish to change the direction of. The drapery will jog to confirm the reverse command has been successful.

6. FOR DUAL TRACK MOTOR 1 AND MOTOR 2 DRAPERY POSITIONS.

On multi-channel remotes, select the channel of the drapery that you wish to reverse the direction on by pressing the Channel button until the LED corresponding with the appropriate channel is lit.

Depress the “programming” button on the back of the remote twice by pushing a pen or other object through the hole in the back of the remote. The LEDs on the front will all flash.

Press and release the top right button on the remote. All draperies on that associated channel will jog.

Tug and release the pendant .The drapery will jog to confirm the swap command has been successful.

PAIR THE REMOTE TO THE DRAPERY (FM)

1. INITIATE LEARN MODE

Pull down and release the Pendant twice to enter learn mode. After the first tug, the drapery should start moving. The second tug should stop it.

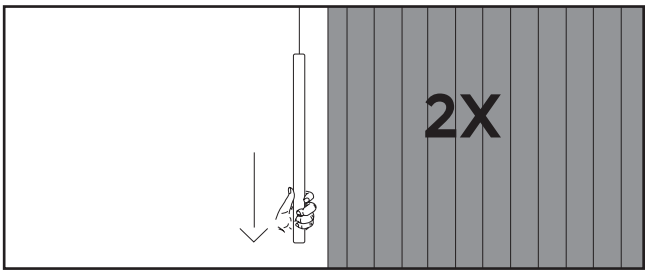

Pull down and release Pendant

---

2. CONNECT THE REMOTE

On multi-channel remotes, select the channel you wish to pair to by pressing the Channel button until the LED corresponding with the appropriate channel is lit.

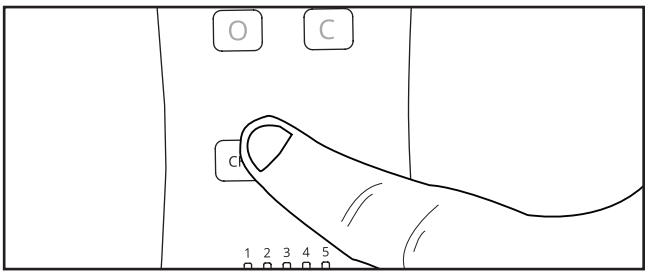

Select channel by pressing channel button

Depress the “pairing” button on the back of the remote by pushing a pen or other object through the hole in the back of the remote. The LEDs on the front will scroll.

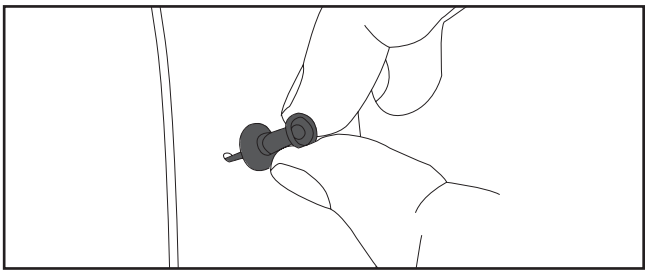

Depress pairing button on back of remote

Press and release the top left button on the remote. The drapery will jog to confirm pairing has been successful.

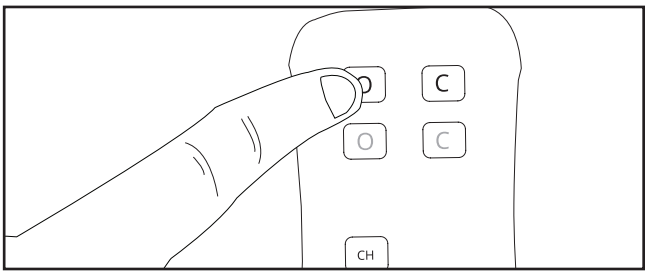

Press and release top left button on remote

ENABLE OR DISABLE SMART ASSIST

Smart Assist allows users to pull the curtain manually and have the movement complete automatically. All drapery tracks come with Smart Assist enabled.

1. MANUALLY MOVE THE DRAPERY

Begin with the drapery in the full open or full closed position. Manually move the drapery more than a foot towards the opposite direction. If Smart Assist is enabled, the drapery will begin to complete the movement automatically. If Smart Assist is disabled, the drapery will remain in place.

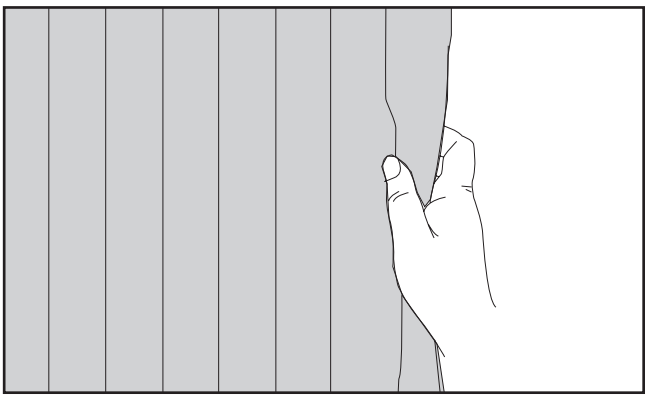

Manually move the drapery one foot

---

2. ENABLE OR DISABLE SMART ASSIST

To disable Smart Assist pull down and hold the Pendant for five seconds or until the drapery jogs, then release. Be sure to pull down on the Pendant before the drapery reaches its limit.

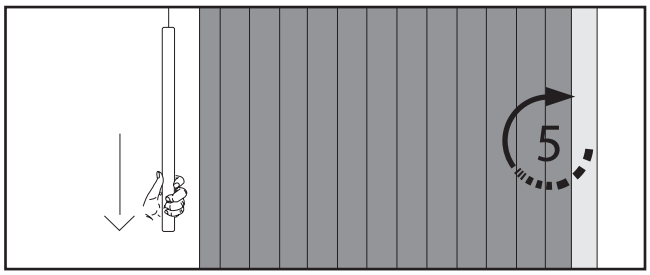

Pull down and hold Pendant for 5 seconds

To enable Smart Assist, pull down on the Pendant for five seconds or until the drapery jogs, then release.

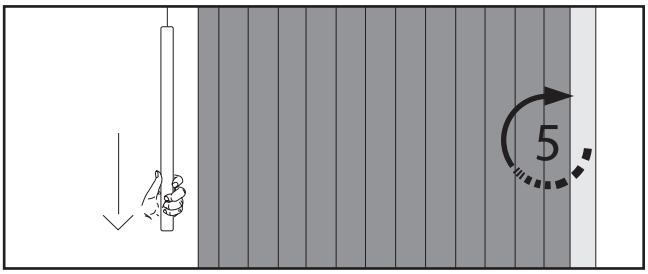

Pull down and hold Pendant for 5 seconds

3. CONFIRM

Pull down and release the Pendant once to confirm. The drapery will jog to confirm Smart Assist has been enabled or disabled.

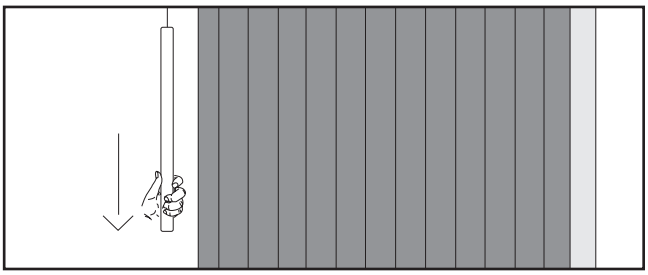

Pull down and release Pendant once

REMOVE THE ZIGBEE DRAPERY FROM A NETWORK

In some instances it may become necessary to remove your drapery from the network. Removing the drapery from the network will remove the drapery from the bridge and you will need to re-add it back to your network before you can use the remote or app.

1. Remove Power

Disconnect power from the unit. For hardwired units, simply unplug the device. For battery powered units, remove the battery tube by twisting it off of the connection wire.

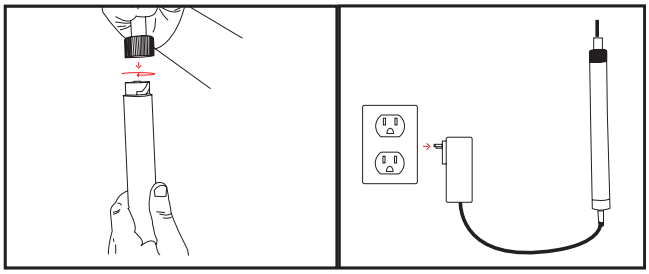

With power disonnected, pull down on the Pendant or cord and release once.

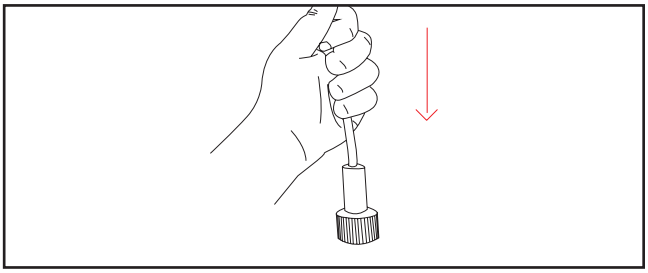

2. Setup The Drapery for Reset

Move the curtain(s) to a position halfway between full open and full closed.

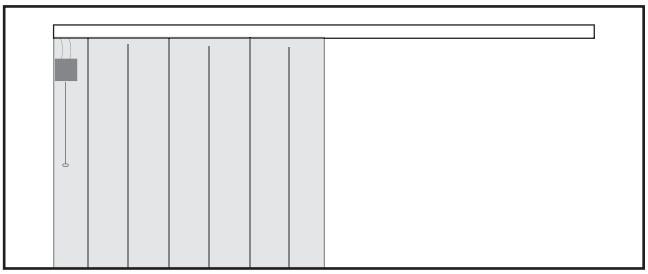

3. Reconnect Power

Reconnect power to the unit by plugging the unit back in or by reconnecting the battery tube.

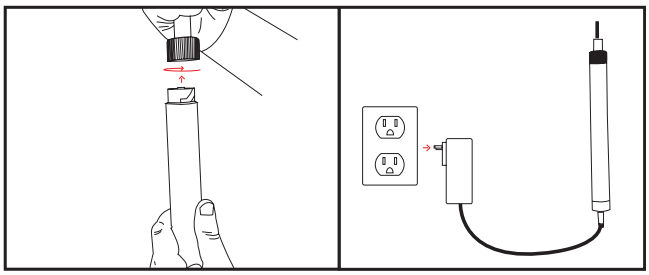

4. Perform Half a Master Reset

Pull down on the Pendant and hold for 10 seconds or until the drapery jogs.

Your drapery has now been removed from the network.

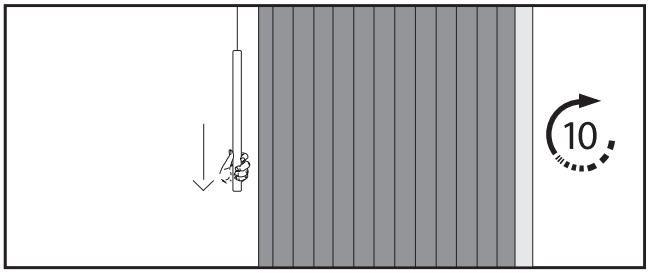

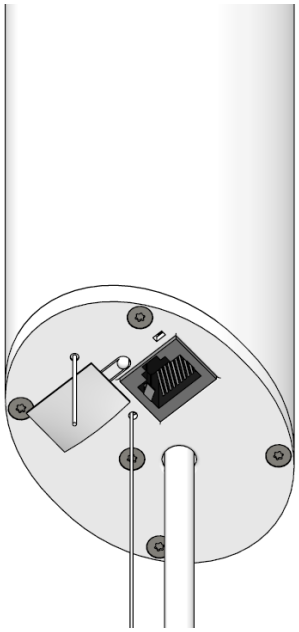

1. PUT MOTOR INTO PROGRAMMING MODE

   Press and release the small uplifted button on the bottom of the motor 6 times . Your motor has now successfully been reset.

MASTER RESET THE DRAPERY (ZIGBEE)

In some instances it may become necessary to master reset your drapery. Performing a master reset will restore the drapery to its factory settings, erasing saved open and closed positions, groups, and all paired remotes.

1. REMOVE POWER

Disconnect power from the unit. For hardwired units, simply unplug the device. For battery powered units, remove the battery tube by twisting it off of the connection wire.

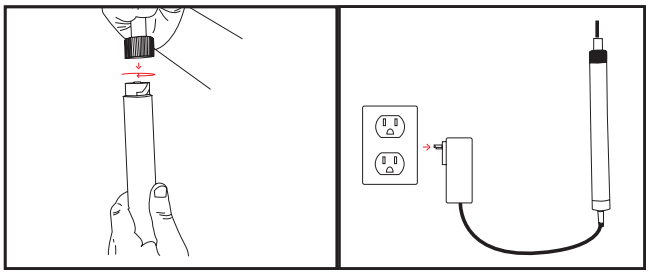

Disconnect power

With power disconnected, pull down on the Pendant or cord and release once.

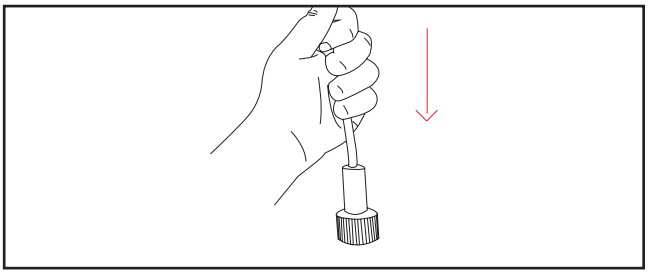

Pull down on Pendant or cord and release once

2. SETUP THE DRAPERY FOR RESET

Move the drapery to a position halfway between full open and full closed.

Move drapery to halfway between full open and full closed

3. RECONNECT POWER

Reconnect power to the unit by plugging the unit back in or by reconnecting the battery tube.

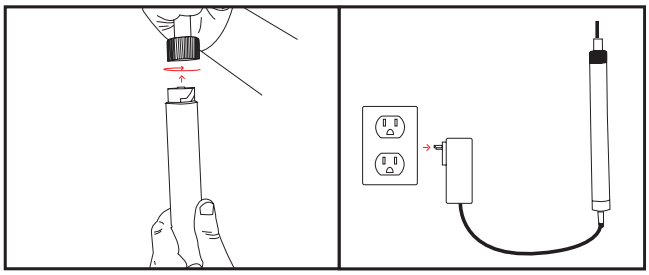

Reconnect power

4. PERFORM MASTER RESET

Pull down on the Pendant and hold for 10 seconds or until the drapery jogs.

Next, push up on the Pendant for 10 seconds or until the drapery jogs.

Your drapery has now been master reset.

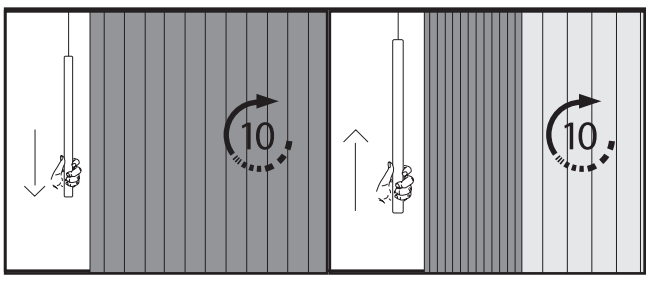

Pull down and hold Pendant and lift up and hold Pendant

STATEMENTS

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by Current Products Co. could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF WARNING STATEMENT

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated to provide a separation distance of at least 20 cm from all persons.

Cet équipement est conforme aux limites d'exposition au rayonnement FCC / ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé de manière à assurer une distance de séparation d'au moins 20 cm de toutes les personnes.

IC STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de license. L'exploitation est autorisee aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tour brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CURRENT
Luxury

844-307-7435
service@currentluxury.com

www.currentluxury.com

Rev. 3/17/25