


Revolve


INSTALLATION GUIDE

Revolve Installation Instructions

1. Bracket Height (BH) = Drapery Height (DH) + Bottom Clearance (BC) + Offset (See Table 1)

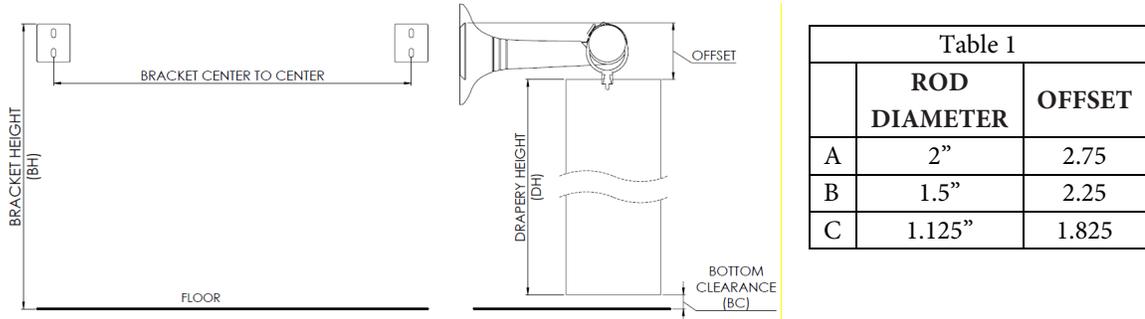


For splice/center support, use a laser level or string to align the mark on the center support plate with the edge of the wall plate.

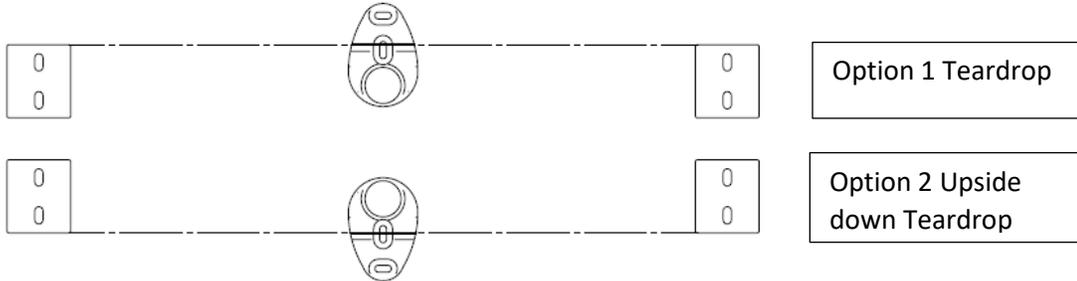


Mount bracket to the wall plate (do not tighten the screws yet).


2. For 1.125" and 1.5" spliced rods, line up the stickers and twist the splice into the rod. Make sure stickers realign after tightening.

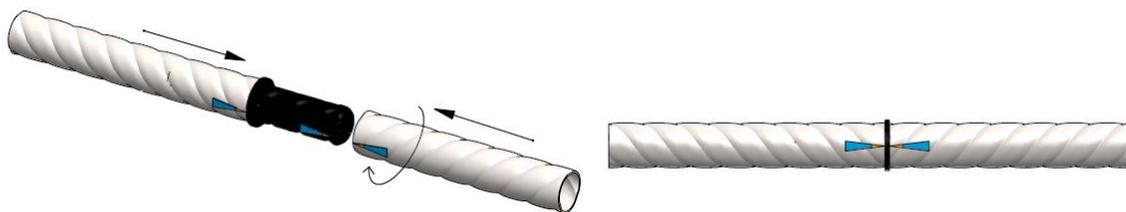


- Remove one ring from the rod. Place the rod in the bracket (3a), adjust the brackets left and right on the wall plate as needed. Tighten the bottom set screws (3b). Place the finial retainers into the brackets (3c).

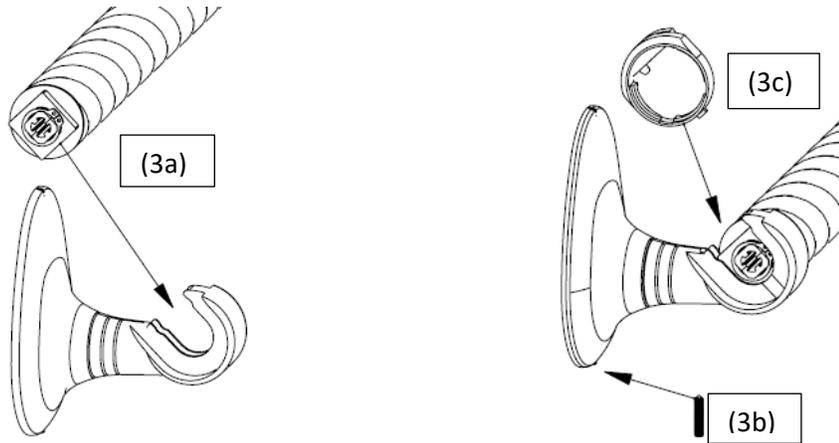


- Place the extra ring onto the finial extension (4a), connect the finial extension to the bracket and twist $\frac{1}{4}$ turn (4b). Make sure the finial extension grooves match the direction of the grooves of the rod (4c).

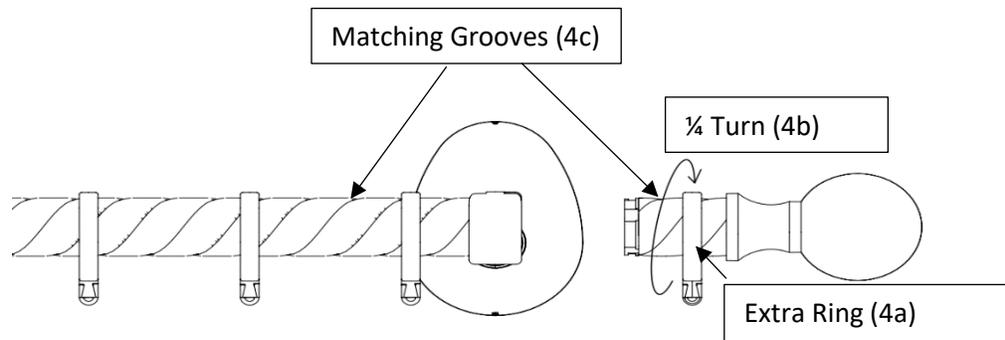

Repeat for the motor side of the rod, and position the cord to come out on the wall side of the rod.


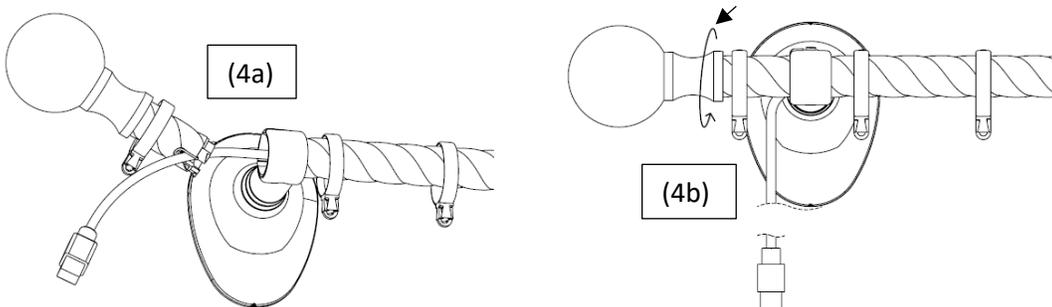


5. Mount the control box to the wall behind the curtain stack, attach the power pendant below the control box, and install the weighted wands.

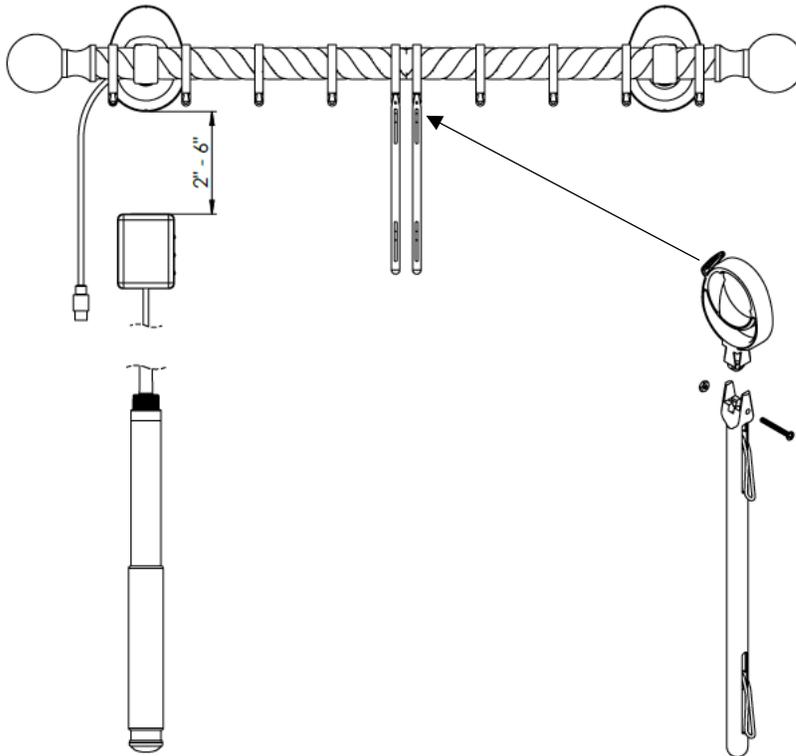


Pin Ripple Drapery Installation:


1. Verify if the rod is center draw or side draw.

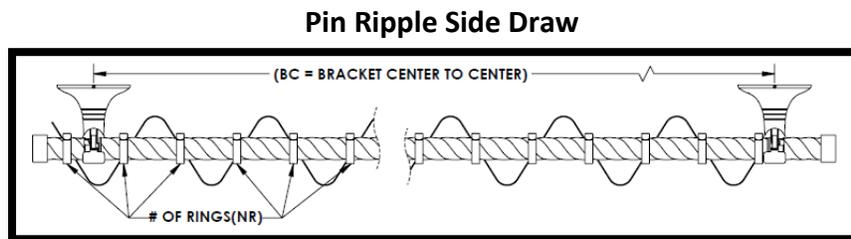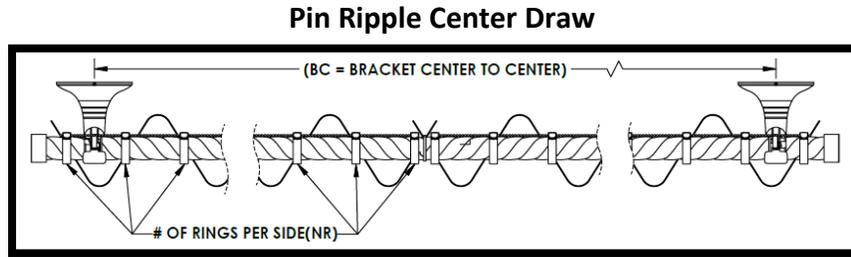

2. Determine Pin Spacing.
 - a. Measure panel width.
 - b. Subtract returns.
 - c. Count rings and evenly spaces pins throughout panel.
3. Apply pins to panel(s).

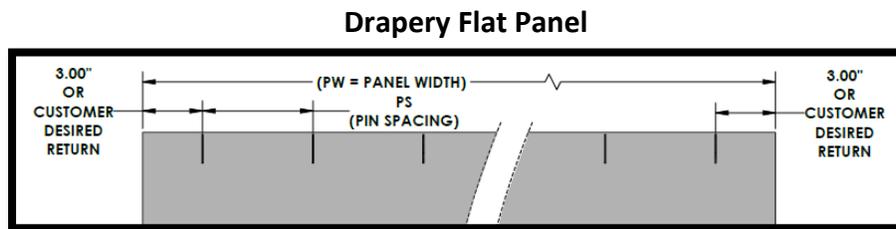


4. Always start with driver, hook the pins in the open slots of the rings by alternating the position of the pins.

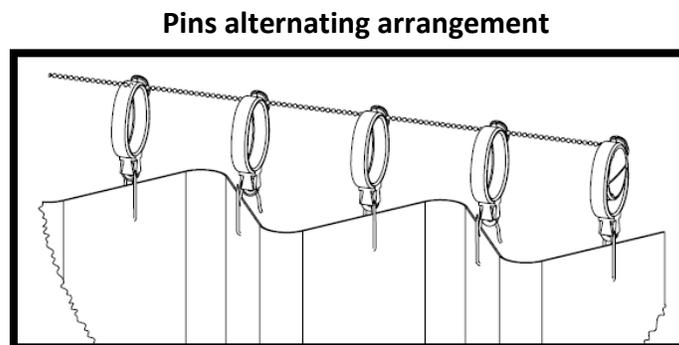


Grommet Drapery Installations:


1. Fold drapery to align grommets; insert grommet clip string through the grommet holes. Attach the clip on the grommet and orient the clip towards the drapery end at $\sim 45^\circ$ up.

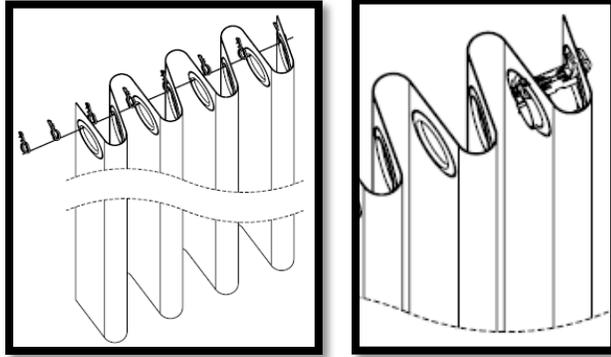

2. Snap the driver clip onto the first two grommets. Make sure to have pilot end on the first grommet, and the string from the clip comes out the slit of the supporting end.
 - a. Make sure the grommet driver ring teeth matches the rod groove pattern.

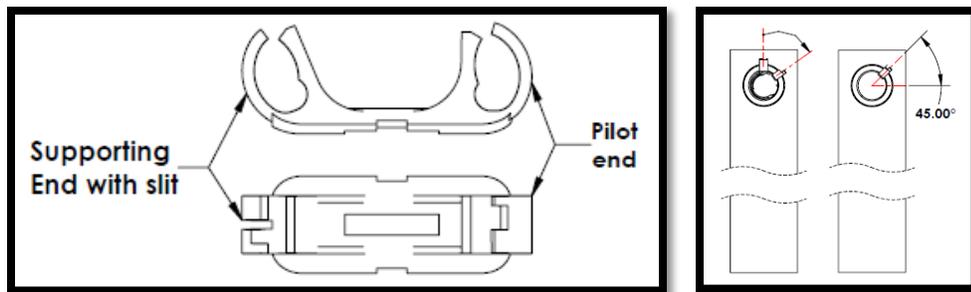

3. Slide the grommet drapery over the rod.
4. Use pliers to lock the driver.
 - a. For center draw applications, making sure both left and right hand drivers have equal distance from the center of the rod before locking them.

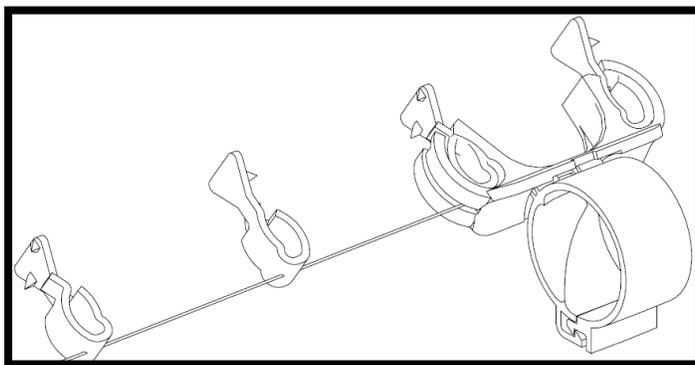

CURRENT
Luxury

844-307-7435
service@currentluxury.com

www.currentluxury.com