1) Place **base upside down** on shipping box or table and locate the **wave clip**.

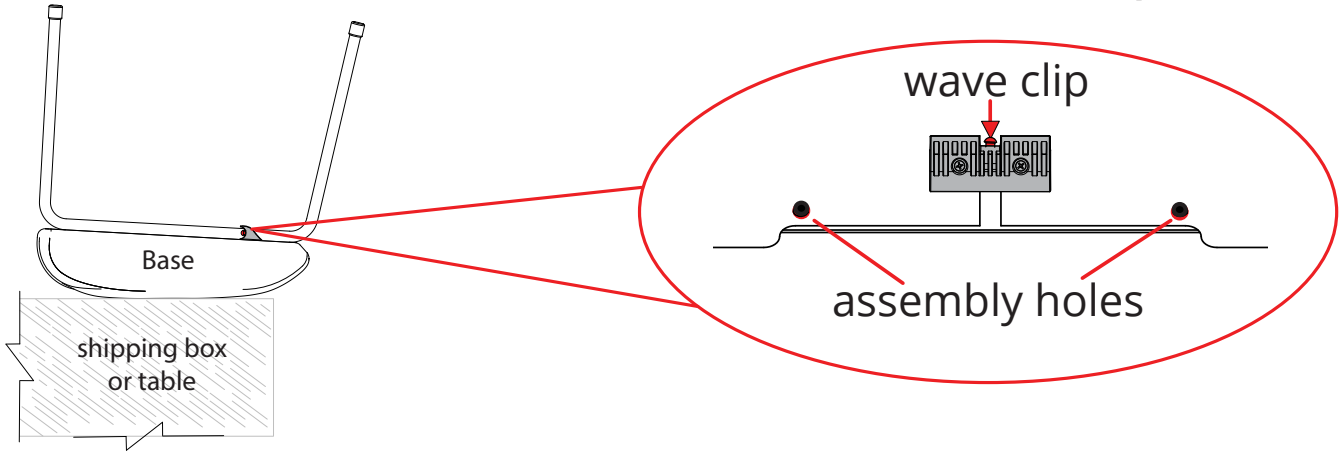

2) Push **backrest onto wave clip** (utilize keyhole to align). **Rotate** into position ensuring frame is **firmly** seated in wave clip.

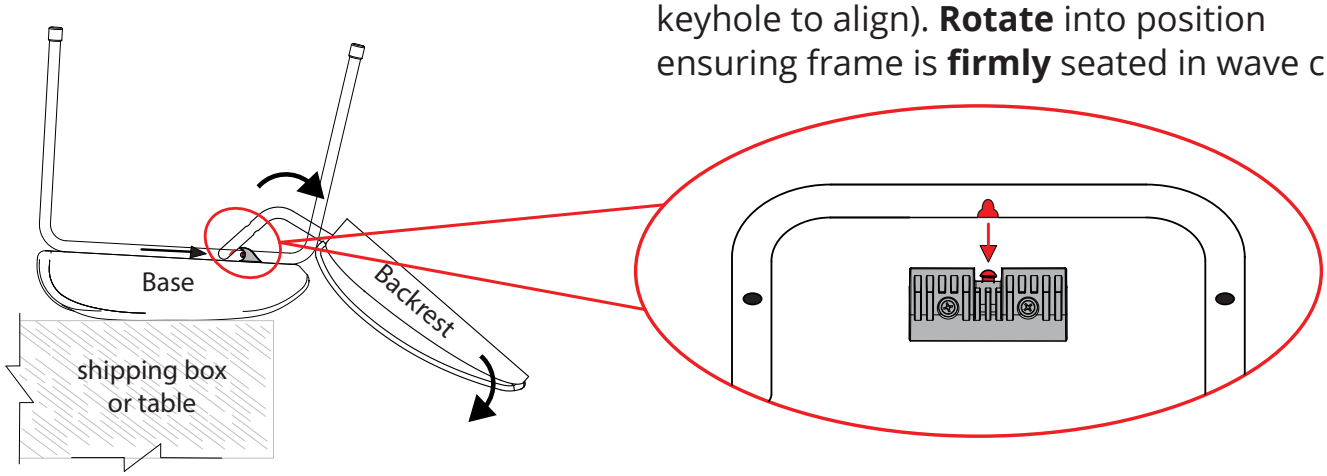

3) Attach backrest to base with included (2) M6 screws. Make sure to **tighten screws**.

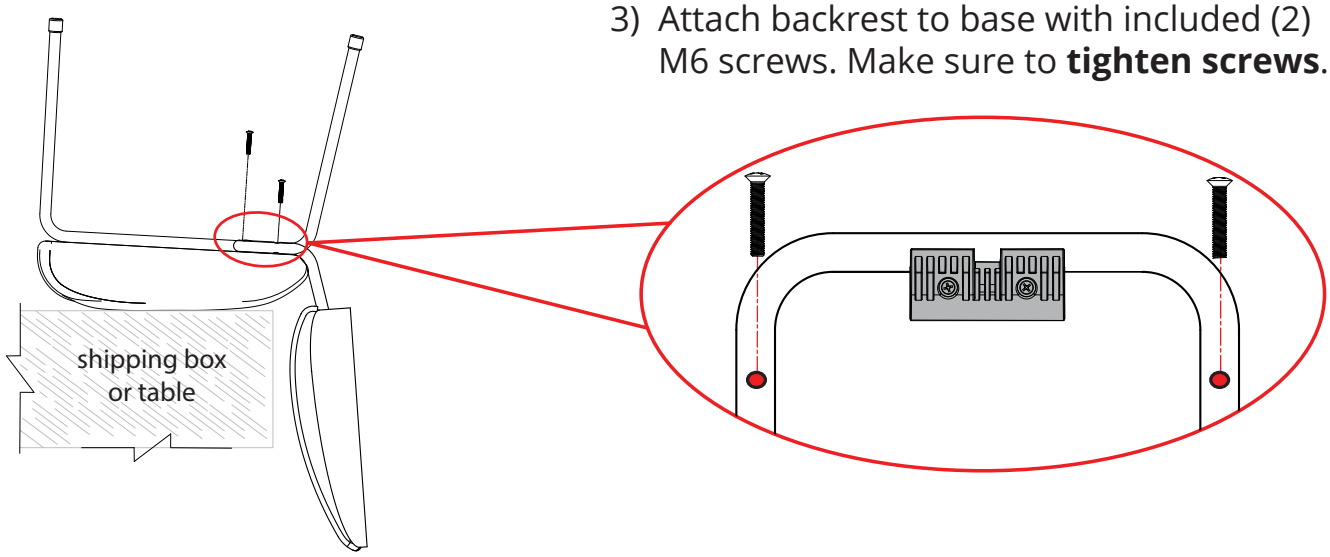

4) Rotate chair into upright position, remove packing foam from arms and enjoy!

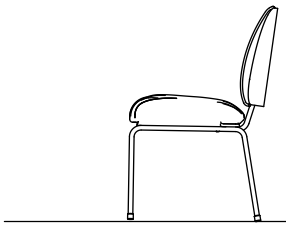

ALMA™
100