

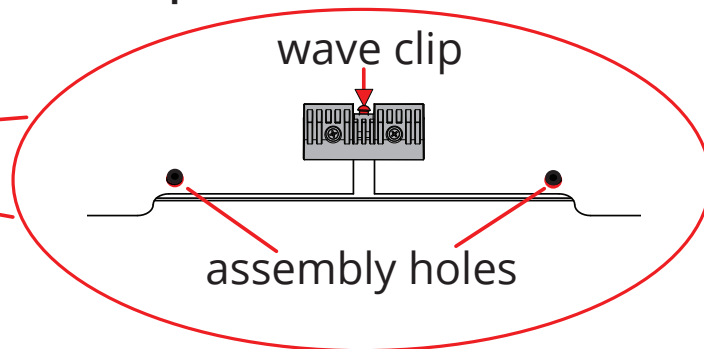
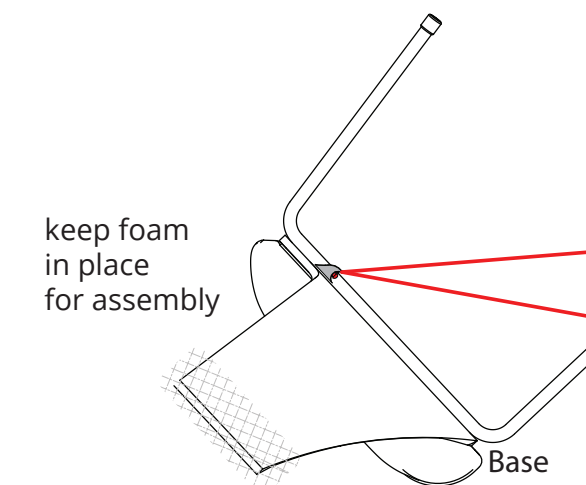




- 1) Place **base upside down** on flat surface with shipping foam still on arms and locate the **wave clip**.

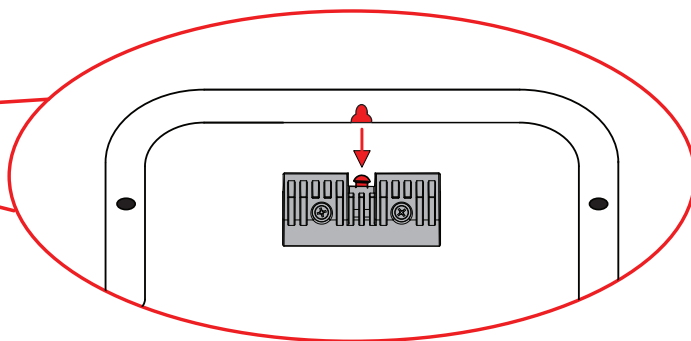


- 2) Push **backrest onto wave clip** (utilize keyhole to align). **Rotate** into position ensuring frame is **firmly** seated in wave clip.

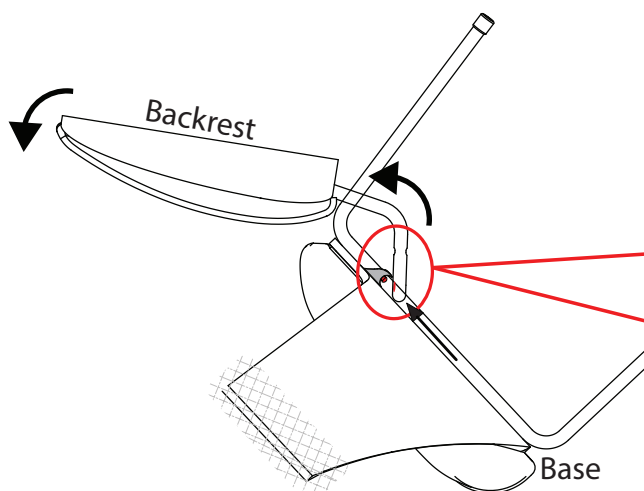

- 3) Attach backrest to base with included (2) M6 screws. Make sure to **tighten screws**.

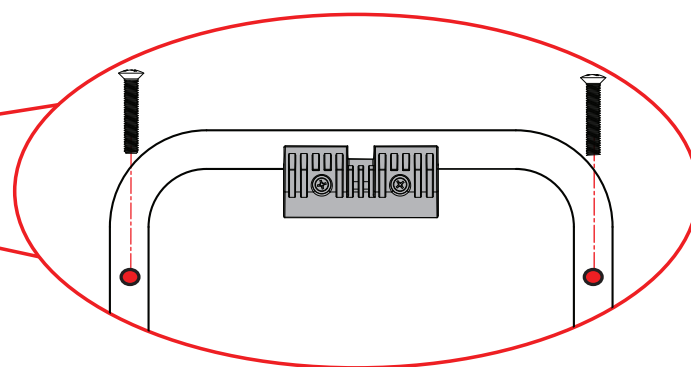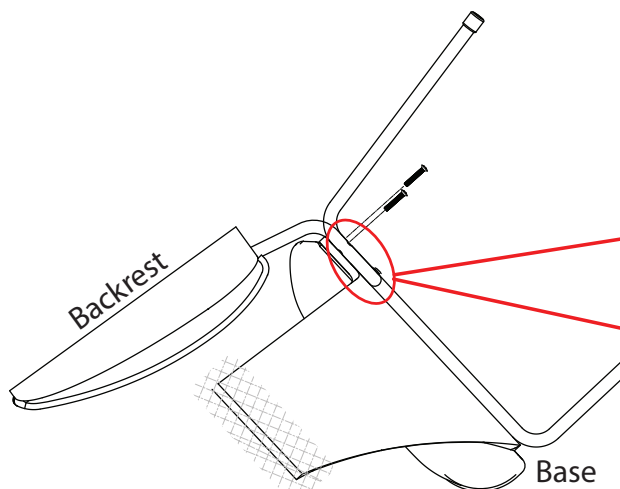

- 4) Rotate chair into upright position, remove packing foam from arms and enjoy!

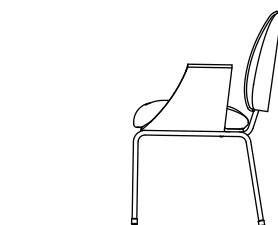

CURRENT
Luxury

850-435-4994
service@currentluxury.com

ALMA
— 100 —